
SIGNAL / HANDOFF / A

YOU HAVE CONTROLLER 1

SHAPE // Make the picture. You do not need to understand the machine to play it.

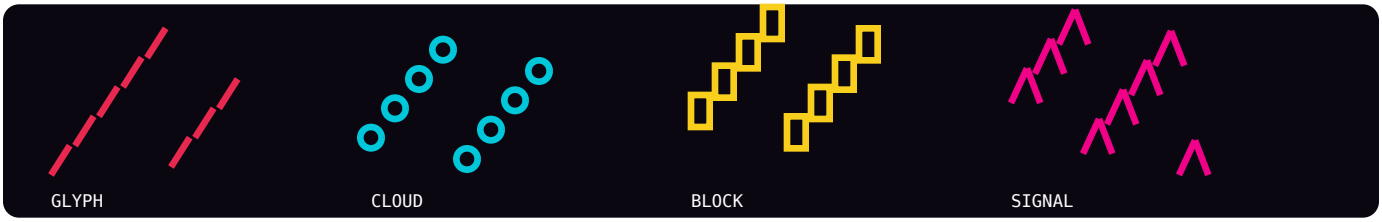

This is a shared visual instrument. There is no winning, losing, score or correct pattern. Your controller changes the shapes and movement of the same picture everyone sees.

BUTTON	DOES THIS	TRY IT
D-PAD	Moves the picture continuously	Tap RIGHT, release. It keeps moving. Tap RIGHT again to stop. Tap DOWN too for diagonal motion.
A	More signal	Make the screen denser.
B	Less signal	Open up black space.
SELECT	Different shape family	Cycle through four distinct graphic languages.
START	Spread a pattern	Infect part of the picture with a repeating form.

> **YOUR FIRST 20 SECONDS**
>
> Tap RIGHT once. Press SELECT until you find shapes you like. Press A a few times. Tap DOWN to make the field drift diagonally. Press START to spread something through it.

To stop movement: tap the active direction again. The other controller has FREEZE, which can stop everything at once.

One warning: the operator may have reassigned the buttons in USE SIGNAL. If the controller behaves differently, ask for the current routing sheet.

PRODUCED BY SLOWFLOOD // WRITTEN BY ECHO (HUMAN) + ADI (NONHUMAN)

SIGNAL / HANDOFF / B

YOU HAVE CONTROLLER 2

ENERGY // Change the colors. Give the picture a pulse. Stop time.



BUTTON	DOES THIS	TRY IT
LEFT / RIGHT	Choose one of five colors	Move L2 → L1 → CENTER → R1 → R2. No wraparound.
UP / DOWN	Faster / slower	Change how quickly the picture rewrites itself.
A	Color blast	A brief alternate color event. May be reassigned as HOME.
B	Tap the beat	Tap along to music to establish/rephase the pulse.
SELECT	Rhythmic glitch ON / OFF	Tap and release to arm or stop the tracking fault.
START	FREEZE	Pause the picture; press again to release.

BONUS MOVES: Hold SELECT, then tap one of these buttons. Release SELECT afterward.

HOLD SELECT +	RESULT
RIGHT	Beat color accent ON / OFF
LEFT	Switch 1/2x, 1x or 2x beat division
UP	HOME: return to CENTER and stop glitch/accent
DOWN	Resync beat phase without changing BPM

YOUR FIRST 20 SECONDS

Press RIGHT twice, then LEFT twice to feel the color ladder. Tap B along to the music. Tap-release SELECT to start the glitch. Hold SELECT+UP to return HOME. Factory buttons only; ask if remapped.